

KASON-QD1200 Pipe Cutting and Chamfering Machine



(Picture just for reference)

Application

It is mainly used for cutting and chamfering big pipes. Cooperating with pipe extrusion production line, makes it an ideal machine for pipe manufacturer, as well as for quality inspection and research institution.

Standards

ISO1167,ASTM D 1598 / 1599

Features

- Introducing European technology for production and manufacturing, it has the characteristics of good cutting effect, high degree of automation, complete protection devices, easy installation and use, and beautiful appearance, etc., filling the gaps in the domestic industry.
- Wide application range, modular structure, pneumatic clamping, planetary cutting, and carbide saw blades ensure that the pipe end face is flat and smooth after cutting, which facilitates tight clamping and sealing during the pipe pressure test.
- The cutting depth is easy to adjust, and the cutting and chamfering can be completed at one time, reducing the labor intensity of workers and improving work efficiency.
- After the sample rotating motor compresses the pipe, the pipe-pressing frame stops descending. The cutting motor starts cutting after lifting the handle and starts running. When the handle is lowered, the motor automatically stops running.
- The electronic soft-start function provides the torque required for the instrument to start smoothly at low speed and reduces the electromagnetic impact on the power supply system.

Specifications

Pipe diameter range	Φ90mm~Φ1200mm
End chamfer angle	15°
Air source pressure	0.4Mpa~0.7Mpa
Feeding method	Handwheel
Lifting method	Pneumatic
Host power supply	380 (1-15%) VAC~380(1+10%) VAC 4KVA (3phase, 5 wire)
Host size	3200×1000×2600mm (L*W*H)
Host weight	700Kg
Power	3kW

19 YEARS

Professional focused on testing equipment


KASON is established in 2003, owns more than 8000 square meters factory. has a professional sales teams, modern enter prise technology center, scientific and technological research and development team.

Machines passed the European CE authentication, American FDA certificate and and ISO 9001.

Products sold to USA, Canada, Australia, Europe, Africa etc, more than 130 countries and supply OEM service for many customers

PROFESSIONAL TEAM

KASON has a professional sales teams, modern enter prise technology center, scientific and technological research and development team.

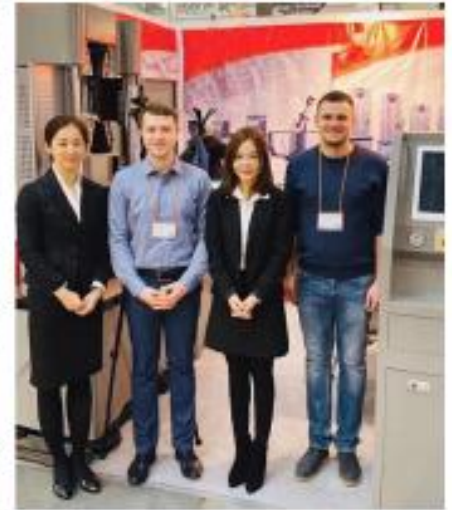

OUR CUSTOMERS (more than 130 countries)



