

KASON HSTR-45D Electric Superficial Rockwell Hardness Tester




Large testing table



V-shaped testing table



Medium testing table

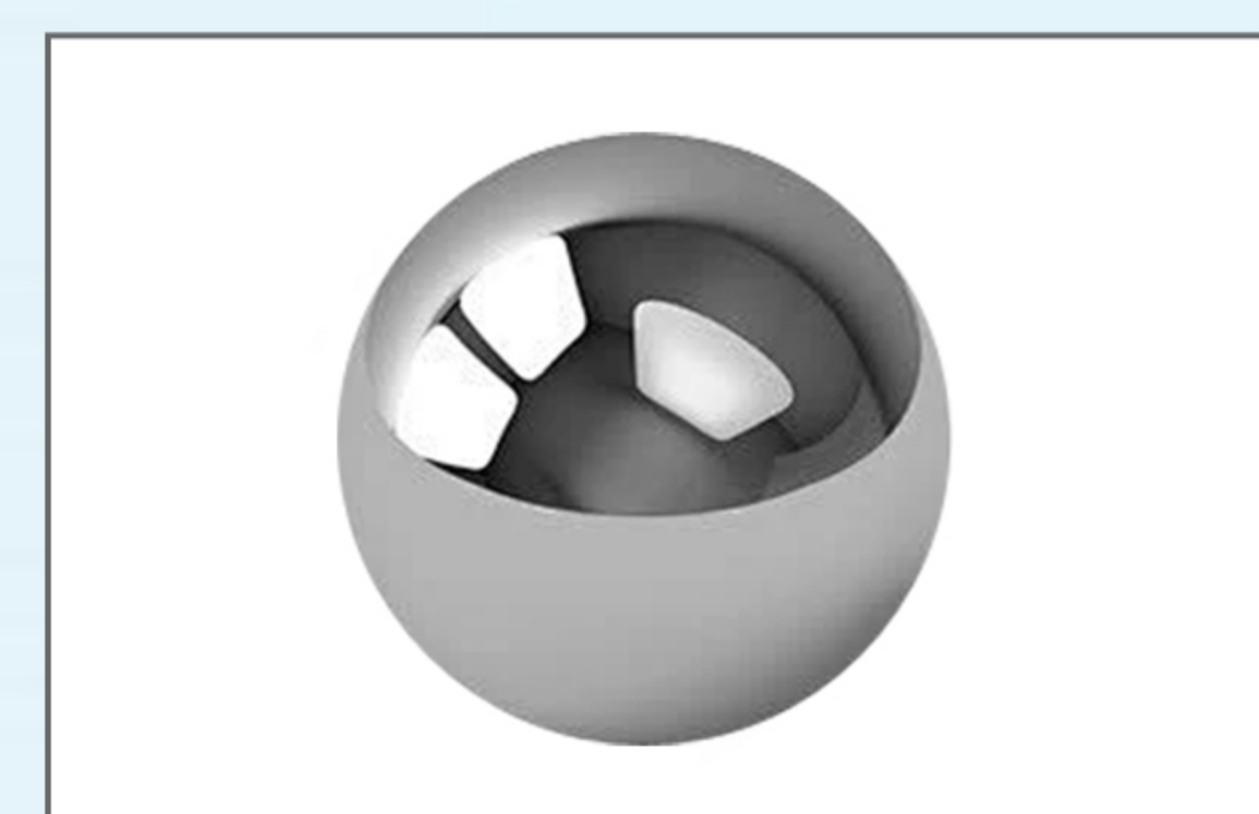

Steel ball ϕ 1.588mm indenter



Diamond Rockwell indenter



Standard hardness block

PRODUCT FEATURES:

- Lever Loading, durable and reliable, the test process automation, no human operator error.
- No friction spindle, high precision test force.
- Precision hydraulic buffers, steady load.
- Dial display the hardness value, HRN, HRT, and can choose other Rockwell Scale.

TECHNICAL PARAMETERS:

Model	KASON HSTR-45D
Name	Specification
Measuring Range	70-94HR15N,67-93HR15T,42-86HR30N,29-82HR30T,20-77HR45N,10-72HR45T
Total Test Force	15Kgf(147.10N), 30Kgf(294.20N), 45Kgf(441.30N)
Hardness Data Read	Dial
Specimen Maximum	210mm
Throat Depth	165mm
Min . Scale Value	0.5HR
Supply Power	220V, 50Hz
Instrument Size	500*250*700mm (L*W*H)
Package size	565*415*730mm
Gross weight	82kg

STANDARD CONFIGURATION:

Rockwell hardness tester host	1 Set	Power cable	1 Pc
Diamond Rockwell indenter	1 Pc	Dust-proof cover	1 Pc
Steel ball ϕ 1.588mm indenter	1 Pc	Accessory case	1 Pc
Standard hardness block	4 Pcs	Operating instruction	1 Pc
Large testing table	1 Pc	Quality certificate	1 Pc
Medium testing table	1 Pc	Packing List	1 Pc
V-shaped testing table	1 Pc		