


KASON HTR-150BD Electric High Stroke Rockwell Hardness Tester



Large, Medium
V-shaped testing table

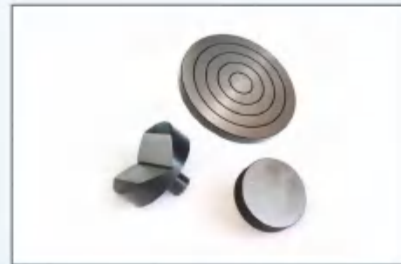

Standard hardness block



Diamond Rockwell indenter



Steel ball ϕ 1.588mm indenter

PRODUCT FEATURES:

· KASON HTR-150BD Motorized Rockwell hardness tester adopts the mechanism of automatic loading and unloading of the test force, the test force is regulated by the load-change hand wheel. It can select the dwell time and is very easy to use. Besides setting zero to dial, there is no man-made error. The instrument has high sensitivity and stability.

TECHNICAL PARAMETERS:

Model	KASON HTR-150BD
Rockwell scale	HRA,HRB,HRC,HRD,HRE,HRF,HRG,HRH,HRK,HRL,HRM,HRR
Conversion scale	Check Conversion table
Initial test force	98 N (10kgf)
Total Test Force	60Kg (588N), 100Kg (980N), 150Kg (1471N)
Hardness Resolution	0.5HR
Test Range	(20-88)HRA; (20-100)HRB; (20-70)HRC.
Hardness data read	Dial
Loading method	HTR-150BD Electric High Stroke Rockwell Hardness Tester
Dwell time	2-60 seconds
Type of indenter	ϕ 1.588mm
Max. Test Height	400mm
Depth of throat	165mm
Dimensions	548*326* 1025mm
Weight	140 KG
Package size	708*526*1175mm (approx)
Gross weight	165kg (approx)
Power supply	AC220V, 50Hz
Executive standard	GB/T230.2 , BSEN 6508, ASTM E18 , ISO 6508 , JJG112

STANDARD CONFIGURATION:

Rockwell hardness tester host	1 Set	Power cable	1 Pc
Diamond Rockwell indenter	1 Pc	Dust-proof cover	1 Pc
Steel ball ϕ 1.588mm indenter	1 Pc	Accessory case	1 Pc
Standard hardness block	5 Pcs	Operating instruction	1 Pc
Large testing table	1 Pc	Quality certificate	1 Pc
Medium testing table	1 Pc	Packing List	1 Pc
V-shaped testing table	1 Pc	Standard Weight	3 Pcs